EGU-02

Digital Gen-set PLC Control Unit

Provides Full Instrumentation & Protection On Any Generator Set

Features

- Micro-Processor Based Design
- Easy-to-Read Large LED Display
- Compact Size with Vibration Protected
- Provides Full Engine & Generator Alarms Signals & Shut Downs
- 2 Wire Remote Start & Stop
- Front Panel Mounted With Manual, Off & Auto Switch
- Provided With Easy-to-Install Auxiliaries, Relays & Fuses
- No Need for Magnetic Pick-up to Check Over Speed
- Simple Operation & Programming*1
- No Battery Power Needed to Maintain Program*2

Protection & Alarm Status Indicators

- Engine Start Failure
- Engine Over Speed
- MPU Failure
- Abnormal Generator Voltage
- Low Engine Oil Pressure
- Maintain Service Alarm
- Emergency Stop Activated
- High Engine Temperature
- Generator Over Load
- Low Fuel Level
- Low DC Voltage



4 Digit 7 Segment Easy-to-Read LED Display

- Programmable Display with 3 Phase Volts, Amp & Freq.
- Failure Alarms Status
- Battery DC Voltage Indicator
- Total Engine Operating Hours & Service Alarm
- Internal Program Settings & Status

Specifications

Power Input Voltage 9~30 VDC CT Specifications Burden Above 2.5 VA

Sensing Input Voltage 15~380 VAC 3 phase 3 wire CT range Min. 25A / 5A

Max. 3000A / 5A

MPU Signal Input Voltage ±2V to ±70V peak Control Signals Current 2.5 Amp with input volts

Frequency Min. 100 Hz Max. 10,000 Hz **Operating Temperature** -25~75 °C

Power Dissipating Max. 7 watt

Physical Specification

Panel Cut-Out 137.5 x 67.0 ±0.5 mm

Dimensions 144.0 (L) x 72.0 (W) x 90.0 (H) mm

Frequency 50~60 Hz

Weight 374 g $\pm 2\%$


Auxiliaries


Easy-to-Install Relay Board ECU-11(12V) / ECU-22(24V)

Isolation Transformer Module PTU-03

Harness for ECU-02 Connection ECU-40

Mechanical Specifications (Unit:mm)

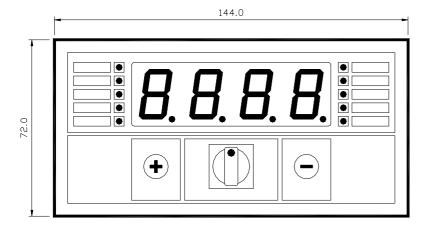

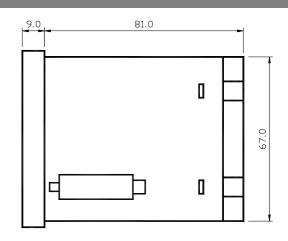

- *1 There is no need for PC connection or software -- all operation can be done directly on ECU-02.
- *2 Customized settings are auto-saved into memory and will remain even when power is off.
- *3 Suffix "K": Indicated a key switch is added.





Please link to http://www.kutai.com.tw for detailed manual.