# ADVR-16-400HZ

# Universal Hybrid Analog-Digital Voltage Regulator Operation Manual



Self Excited 16 Amp Analog / Digital Voltage Regulator for use in 170 – 510 Vac brushless generators with paralleling compatibility





#### **SECTION 1: SPECIFICATION**

Sensing Input (VS1, VS2) Average Reading

Voltage 170 – 510 Vac, 1 phase 2 wire

DIP switch setting

Adjustment 170 – 260 Vac,@ 220 Vac

340 - 510 Vac,@ 440 Vac

Frequency 320 – 420 Hz

Power Input (P1, P2)

Voltage 60 – 300 Vac, 1 phase 2 wires

Frequency 250 – 420 Hz

Excitation Output (F+, F-)

240V 1 phase Continuous 63 Vdc 16A

Max. 90 Vdc 20A for 10 secs.

Resistance Min. 4 ohms

Max. 100 ohms @220V

Fuse Spec. Fast blow 6.3 x 32mm 16A

External Voltage Adjustment (VR1, VR2)

Max. +/- 10% @ 1K ohms 1 watt potentiometer

Quadrature Droop Input (K, L)

CT 1A or 5A greater than 5VA (DIP switch setting) Sensitivity +/- 7% @ PF +/- 0.5 (Droop adjustable)

Analogue Voltage Input (A1, A2)

Input resistance greater than 2K Ohm
Input range +/- 5 Vdc or 0 – 10 Vdc

Sensitivity 1 Vdc for 5% Generator Volts

(Trim adjustable)

**Build Up Voltage** 

5 Vac 25Hz residual volts at power input terminal

**Soft Start Ramp Time** 

3 seconds +/- 10%

**Voltage Regulation** 

Less than +/- 0.5% ( with 4% engine governing )

**Typical System Response** 

Less than 20 milliseconds

**EMI** 

**Built-in Harmonic suppression** 

**Static Power Dissipation** 

Max.4 watts

**Under Frequency Protection (Factory Presets)** 

400 Hz system knee point at 360 Hz

**Over Excitation Protection** 

Excitation Voltage 88Vdc +/- 10% @ power input 220Vac

Inverse-time curve. This function can be turned off.

**Voltage Thermal Drift** 

Less than 3% at temperature range -40 to +70 °C

**Under Frequency Knee Point Thermal Drift** 

Less than +/- 0.1 Hz at temperature range -40 to +70 °C

**Environment** 

Operating Temperature -40 to +70 °C

Storage Temperature -40 to +85 °C

Relative Humidity Max. 95%

Vibration 5.5 Gs @ 60 Hz

**Dimensions** 

162.0 (L) x 112.0 (W) x 43.0 (H) mm 6.38 (L) x 4.41 (W) x 1.69 (H) inch

Weight

510 g +/- 2%

1.125 lb +/- 2%

### **SECTION 2: OUTLINE DRAWING**


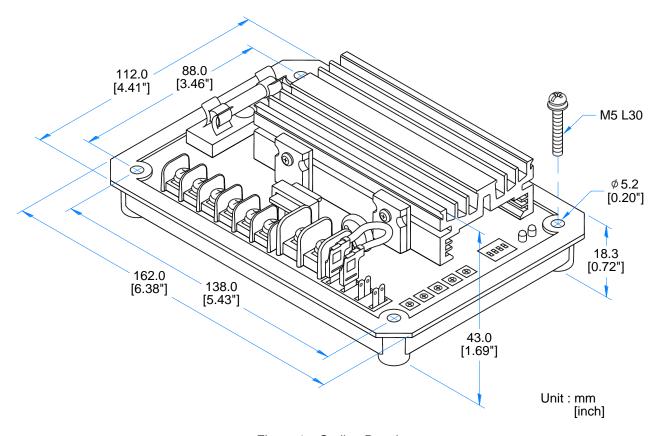


Figure 1 Outline Drawing

# **ATTENTION!!**

- 1. AVR can be mounted directly on the engine, genset, switchgear, control panel, or any position that will not affect operation. For dimension reference, please see Figure 1.
- 2. All voltage readings are to be taken with an average-reading voltmeter Meggers and high-potential test equipment must not be used. Use of such equipment could damage the AVR.
- 3. Secure all wiring connection. Do not install AVR at a place with high vibrations to prevent loose connections. For safety do not touch the heat sink while in operation.

#### **SECTION 3: DIP SWITCH SETTING & VR ADJUSTMENTS**

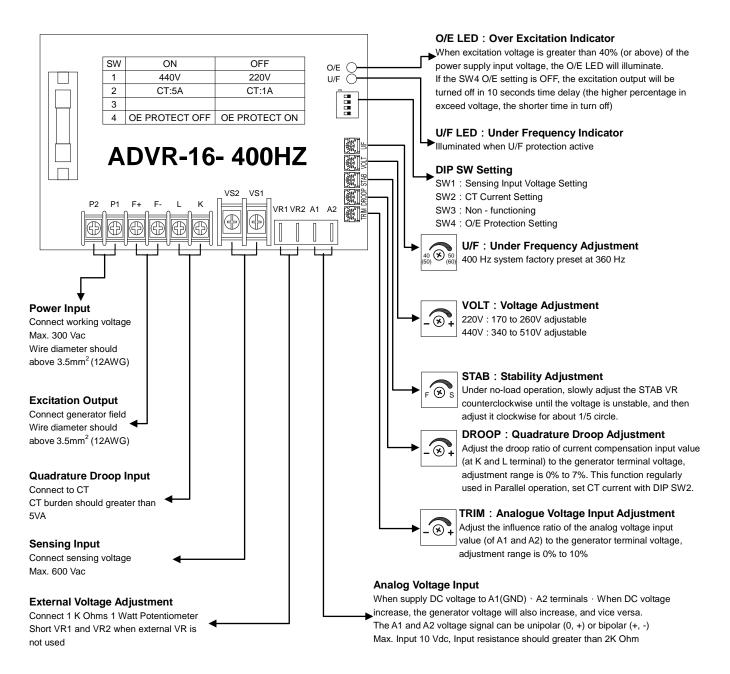

# **ATTENTION!!**

- 1. Improper setting of Under Frequency Protection could cause the output voltage of the unit to drop or become unstable under with changes in load. Avoid making any changes to the U/F setting unless necessary
- 2. Turn off O/E Protection when AVR in paralleling operation
- 3. Terminal: "Fast-On" terminals 6.35mm (1/4 inch) & With 4mm crimping terminal.
- 4. The connection wire for VR1, VR2 and A1, A2 must be shielded wire, the grounding wire of shielded wire should be as close as possible to the AVR, it's suggested to directly lock it on AVR mounting screw.

## **SECTION 4: WIRING CONNECTIONS**

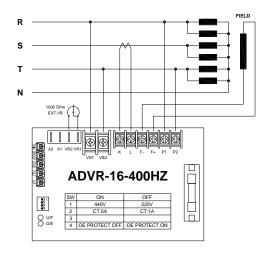


Figure 2 Self-Excited (SHUNT) 220 Vac

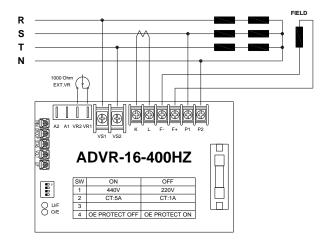


Figure 4 Self-Excited (SHUNT) 440 Vac (Power Input with Neutral Phase)

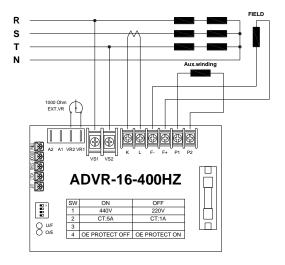


Figure 6 Auxiliary Winding 440 Vac

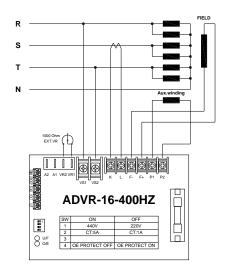


Figure 3 Auxiliary Winding 220 Vac

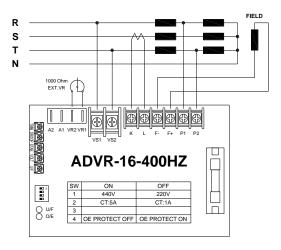


Figure 5 Self-Excited (SHUNT) 440 Vac (Power Input with Start connection)