

CH12 CH22

Automatic Battery Charger User's Guide



固也泰電子工業有限公司
KUTAI ELECTRONICS INDUSTRY CO., LTD.



Headquarters : No.3, Lane 201, Chien Fu ST., Chyan Jenn Dist., Kaohsiung, TAIWAN

Tel : + 886-7-8121771

Fax : + 886-7-8121775

URL : <http://www.kutai.com.tw>

1. SPECIFICATIONS

1.1 Type

| Model | Input Voltage (AC) | Output Voltage (DCV) | Available Battery (V) | Output Current Max. (A) | Fuse (A) | Power Consumption (W) | Weight (KG) |
|---------|-----------------------|-------------------------|-----------------------------|-------------------------------|-------------|-----------------------------|----------------|
| CH1212E | 1Ø 110V 50/60HZ | 13.8 | 12 | 15 | 10 | 345 | 9.2 |
| CH1224E | | 27.6 | 24 | 15 | 10 | 525 | 10.2 |
| CH2212E | 1Ø 220V 50/60HZ | 13.8 | 12 | 15 | 10 | 345 | 9.2 |
| CH2224E | | 27.6 | 24 | 15 | 10 | 525 | 10.2 |

1.2 Charge mode : Floating Charge.

1.3 Unit Power Dissipation : Max. 92 watt

1.4 Environment :

- Ambient temperature 5 °C ~ 40 °C.
- Relative humidity in used 20 ~ 90%.
storage 20 ~ 70%.

1.5 Protection :

- Fixed voltage, current limited, auto-feedback.
- Fuse protected Ø6 * 30mm.
- Reverse polarity protected.
- Short-circuit protected.

1.6 Size : 293mm L * 157mmW * 185mm H.

2. OPERATION PROCEDURE

2.1 Ensure the type and output voltage before power on.

2.2 Connect charger-line (accessory) with +/- terminals.

Warning : +/- terminals should not be shorted!

2.3 Plug in then switch on, voltage meter should be read by 13.8V(12V) / 27.6V (24V).

2.4 If output voltage correct then power off. Connect the red side of the charger-line to the "+" terminal of the battery, the black one to the "-" terminal.

2.5 Power on then charging is starting, the more charge current the less time needed, current is adjusted by current-adjust-knob on the panel. For the long time charging, we suggest the current less than 1A.

2.6 Factory setting of output voltage is 13.8V or 27.6V, on the condition of old batteries the voltage can be boost by turning the VR from the hole located on the panel.




CAUTION!! High voltage will cause batteries liquid vaporized and batteries damaged.

2.7 Our charger has voltage-feedback-sensor to avoid batteries be over-charged, if the battery is full charged then output current will be reduced to zero, in order to extend the life of the battery.


3. NOTICES

- 3.1 Avoid to place the charger in the environment such as high temperature, humidity, acid & alkali, Prevent from insolation, drench and caustic.
- 3.2 AC input voltage should fit the charger type. We suggest to install a protection device (such as MCCB) inter AC power and charger.
- 3.3 Never depart the charger.
- 3.4 Never change internal wiring of the charger.
- 3.5 Never adjust internal VRs of the PCB intentionally.
- 3.6 Routine-check of output voltage is necessary
- 3.7 Terminals of the charger and polarities of the battery should be connected correctly, red to "+", black to "-".

Warning : Never short "+" (red terminal) and "-" (black terminal) polarities.
- 3.8 Please operate the charger under the max. maximum capacities.
- 3.9 Beside charge battery, please do not use charger for other purpose.
- 3.10 When install the output connect wires, please references the figure below.

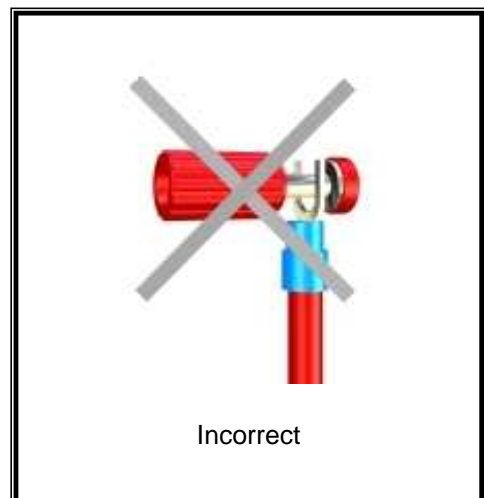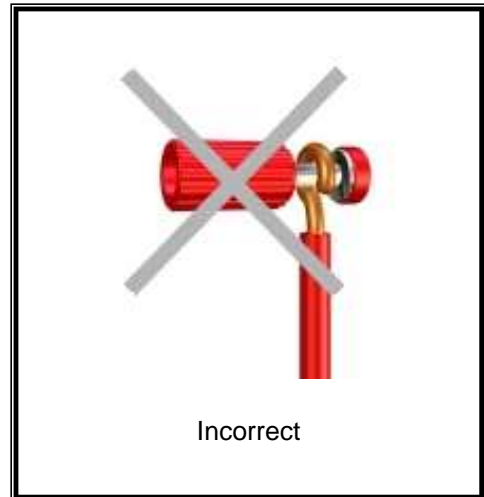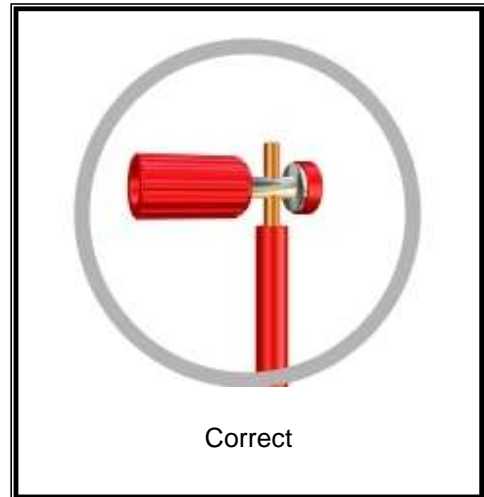

4. OUTLINE

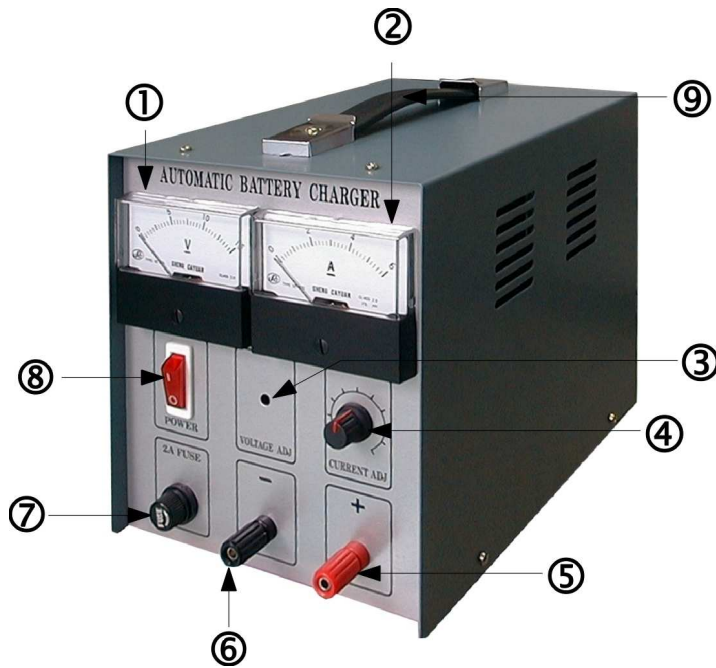

- (1) Voltage Meter.
- (2) Current Meter.
- (3) Voltage Adjustment VR
(inside-mounted).
- (4) Current Adjustment Button.
- (5) Output terminal (Red).
- (6) Output terminal (Black).
- (7) Fuse.
- (8) Power Switch & Lamp.
- (9) Handle.

5. TROUBLESHOOTING

| | |
|------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No output voltage | <ol style="list-style-type: none"> 1. Check AC Power. 2. Check fuse. 3. Charge-line if poor connection or not. 4. Check if short exists or not . 5. Check if polarities are oppositely or not. |
| No charge current or current Can't be adjusted | <ol style="list-style-type: none"> 1. Check if battery is full charged or not. 2. Check if poor connection exists or not. 3. Check if the type and the rate of the charger are correct or not. 4. Check if battery is out of order or not. |

※ If the step above can't make the charger working still please contact with us.