


# Battery-powered Automatic Flashing Module User Manual





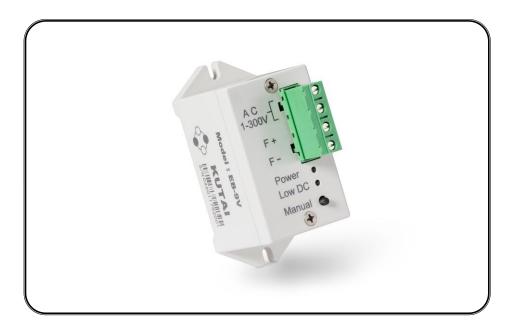

#### **SECTION 1: FEATURES**

- No external battery or DC power supply required, excitation power provided by an internal battery.
- Small size, light weight and easy installation saving labor.
- Automatic excitation detection requires no manual operation or settings.
- Very low static power consumption, Up to 3 years between battery replacement in standby mode.
- Excitation function repeats 3 times and stops automatically when voltage is established.
- Battery low voltage indicator reminds user to change battery.
- Up to three repeat flashing attempts and will automatically stop when voltage builds up.
- Excitation failure indicator. Resets automatically when voltage builds up or engine is stopped.
- Battery reverse polarity protection.
- Excitation field F+, F- Reverse Polarity Protection.
- Built in manual forced excitation push button.

# **SECTION 2: SPECIFICATION**

# **Sensing Voltage Input**

Voltage 1 – 300 Vac 1 phase 2 wire

Frequency 50/60 Hz

#### **Excitation Output**

Voltage 9 Vdc

Current 700 mA Max.

# **Flashing Output Conditions**

When voltage less than 10 Vac at frequency greater

than 40 Hz

#### **Flashing Output Time**

Excitation output 5 seconds. Up to 3 attempts at 5

second intervals

#### **Time Between Battery Change**

3 years Max.

( Use only Ultralife U9VL-J-P lithium battery )

## **Lithium Battery Specifications**

Model no. Ultralife U9VL-J-P

Voltage 9 Vdc

Current Normal discharge 700 mA Max

Pulse discharge 1050 mA Max

Capacity 1200 mAh @ 23 °C

Service Life 10 years

#### **Environment**

Operating Temperature -20 to +60 °C

Storage Temperature -40 to +60 °C

Relative Humidity Max. 95%

Vibration 5 Gs @ 60 Hz

# **Dimensions**

87.0 (L) x 41.5 (W) x 61.7 (H) mm

3.42 (L) x 1.63 (W) x 2.43 (H) inch

#### Weight

85 g +/- 2%


0.19 lb +/- 2%

# **ATTENTION**

- 1. Before using a Megger remove all wires connected to the EB-9V to prevent high voltage damage to the unit.
- 2. Use only ULTRALIFE U9VL-J-P lithium battery.
- 3. Use of other battery models will reduce the time the unit can operate and the service life of the battery and could lead to failure of voltage build-up.


2 *EB-9V* 

**SECTION 3: Explanation of Terminals, Indicators, and Adjustments** 

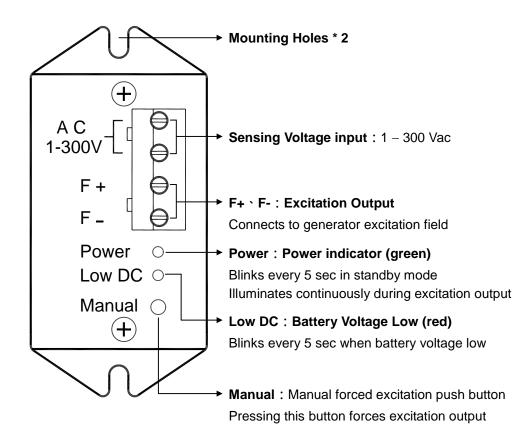

\* Both Power and Low DC indicators will blink when excitation fails

# **SECTION 4: Dimensions / Connection Diagram**

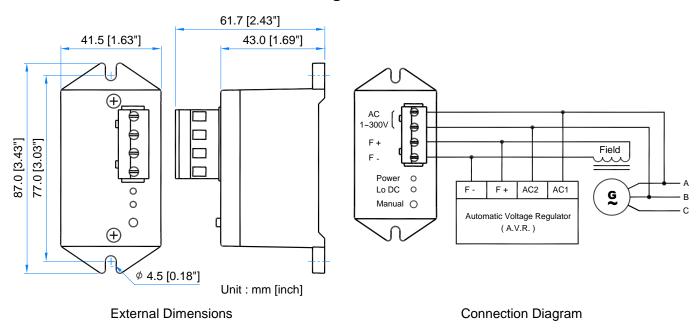

Appearance and specifications of products are subject to change for improvement without prior notice.

3